


WEATHERPROOFING KIT FOR SONOZAIRE MODELS 630A AND 330A


The weatherproofing kit for the Sonozaire models 630A/330A contains the following materials for field installation:

1. A hinged control cover including lip gaskets installed.
2. All necessary stainless steel screws, nuts, washers, and a clamp and standoff to hold the cover at the bottom.
3. A length of 1/2" wide gasket material to be installed the full length of the top, front inside edge of cabinet.
4. A multi-media air filter with water spray retarding screens for better air filtering.

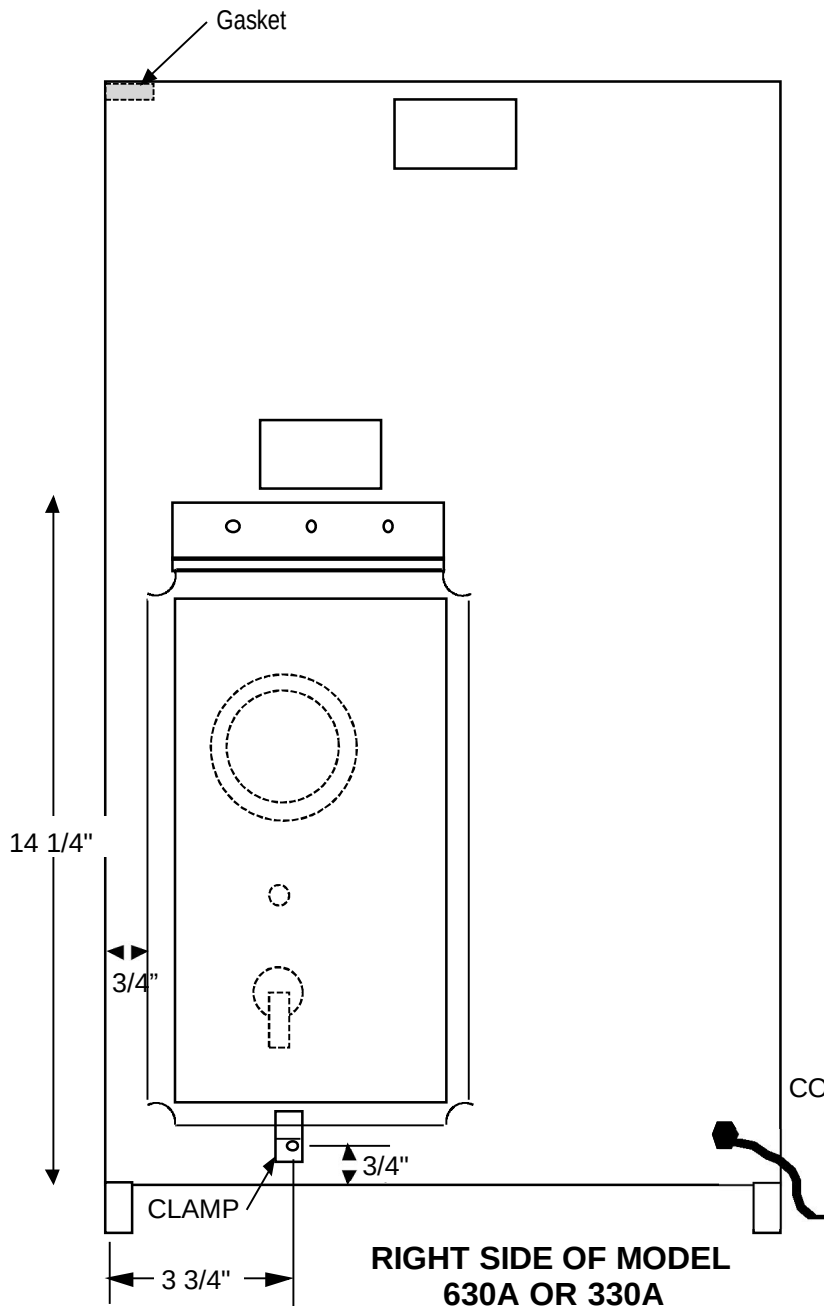

COVER MOUNTING INSTRUCTIONS

1. Use the approximate dimensions at left to align the cover. Adjust the cover to insure proper coverage of control components.
2. Mark the screw holes of the top hinge.
3. Verify that the cover will operate properly in this position.
4. Drill marked holes with a 3/16" drill bit.
5. Install the cover with 10/32 hardware.
6. Mark the bottom hole and verify that the clamp and standoff will allow the clamp to swivel in this position.
7. Drill marked hole with a 3/16" drill bit.
8. Install the standoff and swivel the clamp over the edge of the cover.
9. Tighten screws as necessary to insure the water tightness of gaskets.

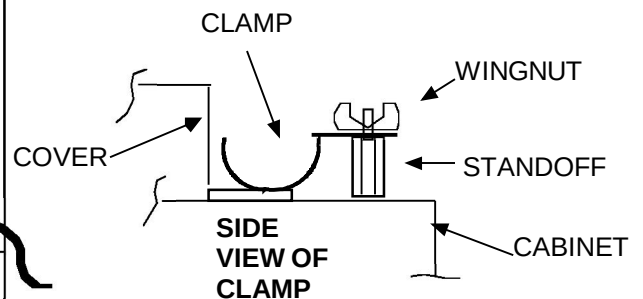

(Dimensions shown are approximate)

WEATHERPROOF KIT PACKING LIST

1. 1 EACH WEATHERPROOF COVER FOR INSTALLING OVER THE CONTROL KNOBS, WITH GASKETS INSTALLED.
2. 1 SET OF STAINLESS STEEL HARDWARE: 4 -SCREWS, 1/2" X10-32, 3 - NUTS, #10, 5 - LOCK WASHERS, #10, 1 - DOOR CLAMP, 1 - WING NUT #10-32, 1 - ALUMINUM STANDOFF #10-32
3. 2.5 FEET OF 1/2 INCH GASKET MATERIAL FOR FULL COVERAGE OF THE REMOVABLE DOOR (30A).
3.5 FEET OF 1/2 INCH GASKET MATERIAL FOR FULL COVERAGE OF THE REMOVABLE DOOR (630A).
4. 1 EACH MULTI-MEDIA AIR FILTER FOR INSTALLATION IN THE TRAY UNDER THE UNIT.